


## Windows Driver Installation




Double click the installation icon

Then, it will show as below picture:

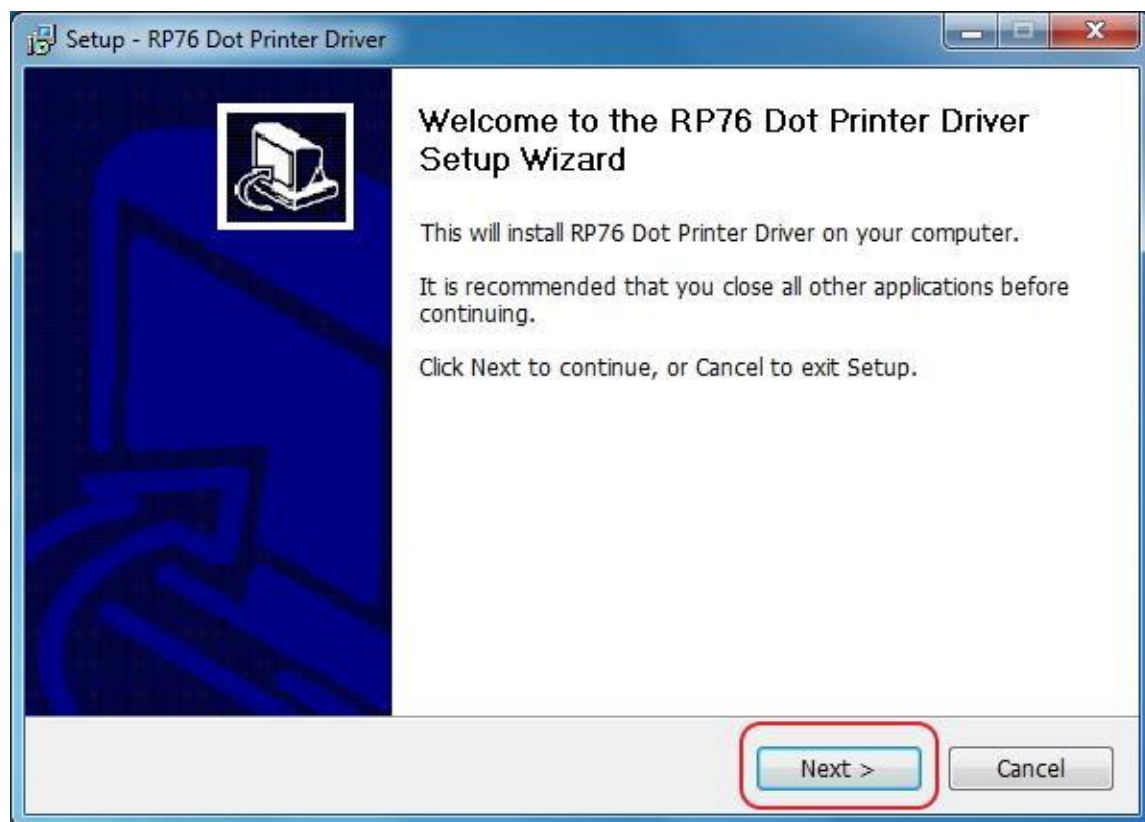


Then click "NEXT".

# Xiamen Rongta Technology Co., Ltd.

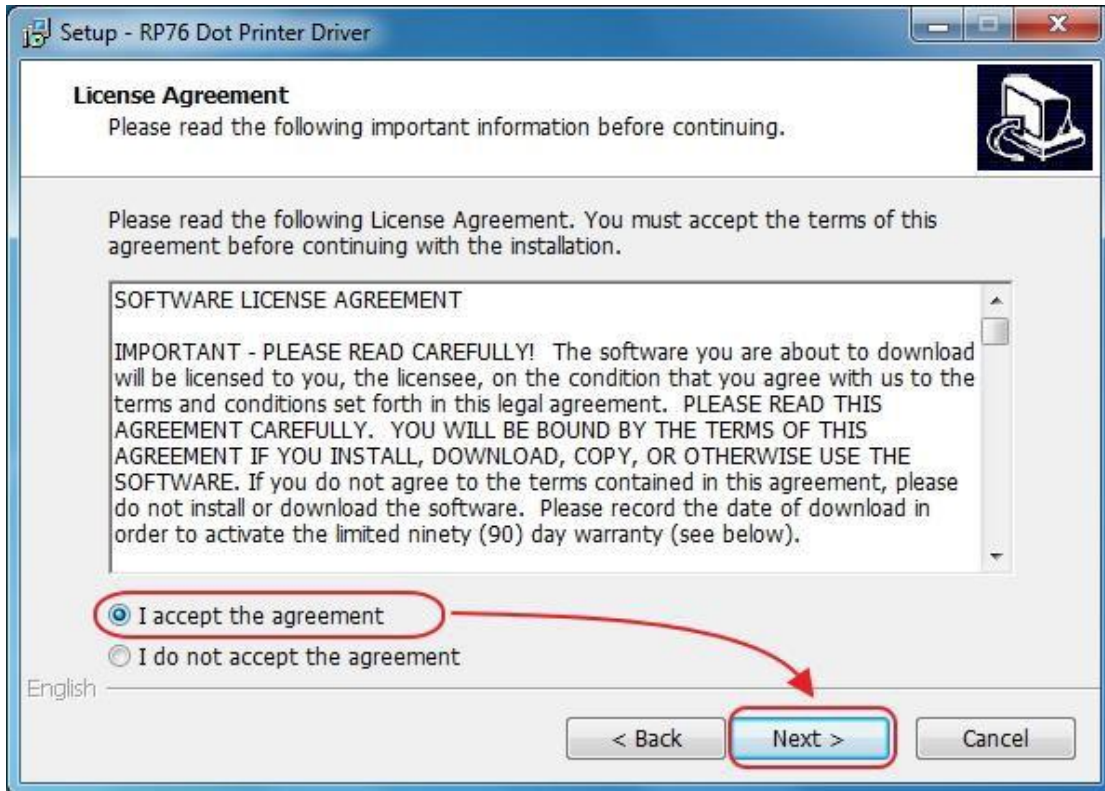


Please read carefully the license Agreement, and then click “I accept the agreement”.

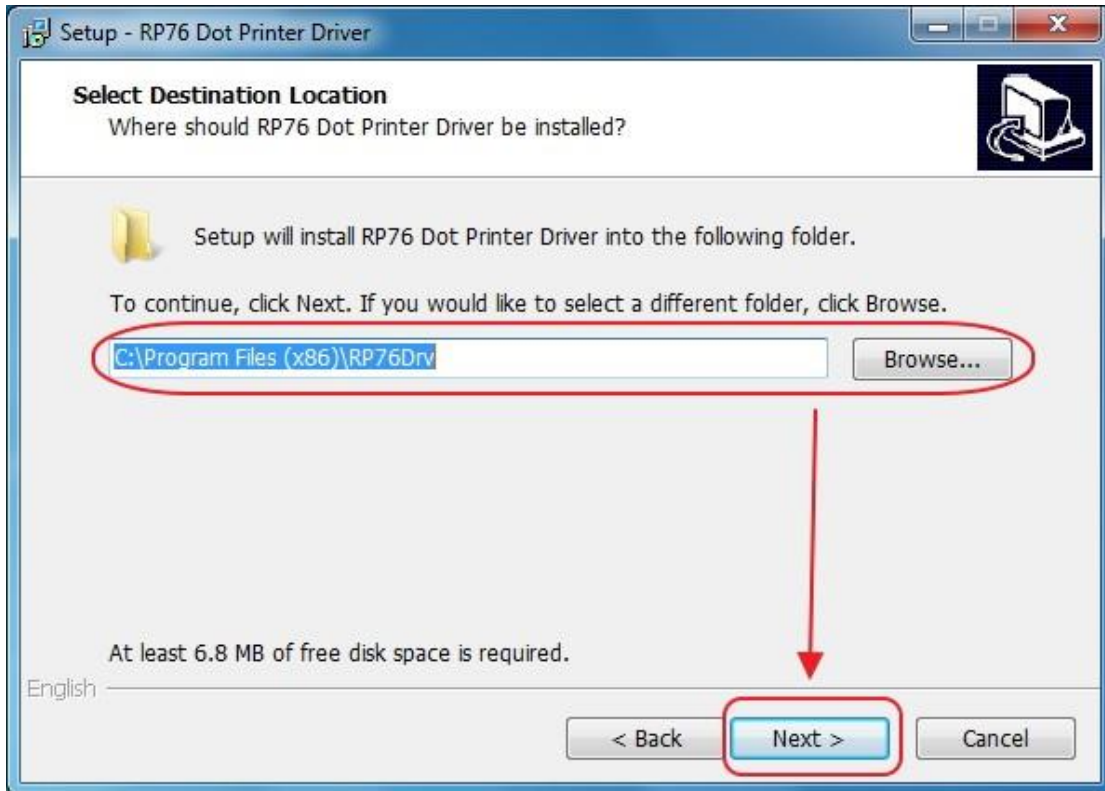


The driver is installed by default on a assigned folder of C disk (recommended). If you want to change the installation location, please click "Browse" to select the location. Then, click "Next"

# Xiamen Rongta Technology Co., Ltd.

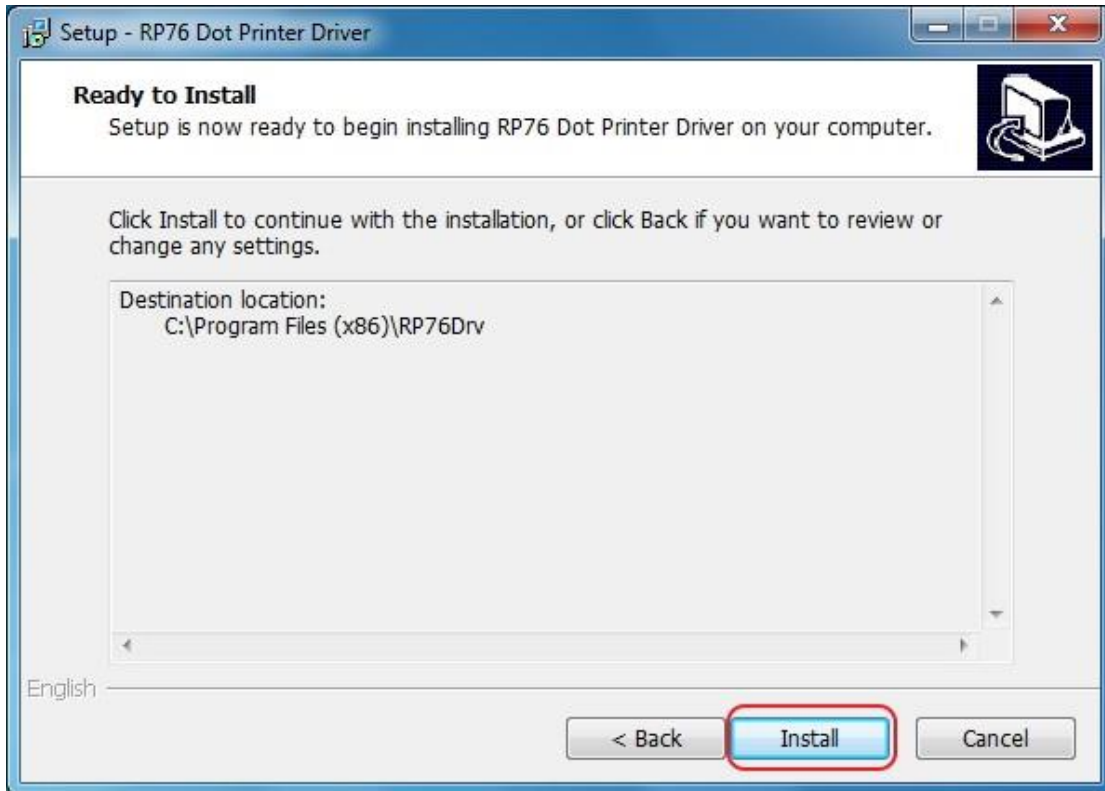

Click "Install"

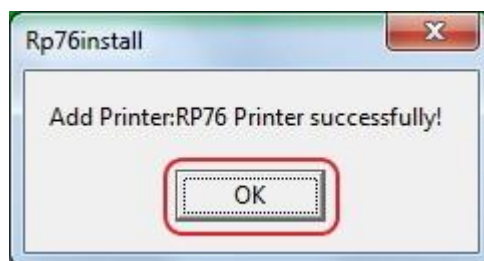

Wait till it shows the above picture, it means, the printer driver has been installed successfully, and then click "OK".

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/147024003112006042>