



KONICA MINOLTA

bizhub 4750/4050 USER'S GUIDE

Introduction





Table of contents

1 Introduction

1.1	Welcome	1-3
1.2	User's Guides	1-3
	Booklet manuals	1-3
	User's guides included in User's Guide CD/DVD-ROM	1-3
1.3	Notations and symbols used in this manual.....	1-4
	Procedural instruction.....	1-4
	Symbols used in this manual	1-4
	Product and key names.....	1-4
	Notations of application names	1-4
1.4	Safety information.....	1-5
	Warning and precaution symbols	1-5
	Meaning of symbols.....	1-5
1.5	Legal Restrictions on Copying.....	1-10
1.6	Regulation notices	1-11
	For EU member states only	1-11

2 Before Using This Function

2.1	CD/DVD-ROM supplied with this machine	2-3
2.2	Installation location and environment.....	2-4
2.2.1	Installation location	2-4
2.2.2	Installation environment.....	2-5

3 About This Machine

3.1	Checking the name of each part	3-3
	Front side	3-3
	Rear side	3-4
3.2	Checking the option configuration.....	3-5
	List of optional components	3-5
	Front view (with optional devices installed)	3-6
	Rear side view (with optional devices installed).....	3-6

4 Turning the Power On or Off

4.1	About power supply	4-3
4.2	Turning the Power Switch ON or OFF	4-4
4.3	Using the Power key	4-5
	When using the Power key as a Power Save key	4-5
	When using the Power key as a Sub Power OFF key	4-6

5 Loading the Original

5.1	Loading the original into the ADF.....	5-3
	Original available for ADF.....	5-3
	Loading the original into the ADF	5-4
5.2	Loading the original onto the Original Glass.....	5-5
	Original available on the Original Glass	5-5
	Loading the original onto the Original Glass.....	5-5

6 Loading Paper

6.1	Paper	6-3
6.1.1	Checking the available paper types.....	6-3
6.1.2	Checking the available paper sizes.....	6-4
6.1.3	Precautions for correct operations.....	6-5
	Unavailable paper.....	6-5
	Storing paper.....	6-5
6.2	Loading paper into the Manual Feed Tray	6-6
	How to load paper into the Manual Feed Tray.....	6-6
	Loading postcards.....	6-8
	Loading envelopes.....	6-9
6.3	Loading paper into Tray 1/2/3/4	6-10
	Loading letterheads.....	6-12

7 Control Panel

7.1	Names and functions of Control Panel keys	7-3
7.2	Changing the angle of the Control Panel	7-5
7.3	Touch Panel	7-6
7.3.1	Operating the Touch Panel.....	7-6
	Tap.....	7-6
	Flick.....	7-6
7.3.2	Displaying the Keypad.....	7-6
7.3.3	Switching the entry or selection screen.....	7-7
7.3.4	Precautions on using the Touch Panel.....	7-7
7.4	Entering characters	7-8
7.5	Screen layout	7-9
7.5.1	Main Menu.....	7-9
7.5.2	Main screen.....	7-10
7.5.3	Icon types.....	7-11
	Icons indicating the status of this machine.....	7-11
	Icons to change to selection screen.....	7-11
7.6	Changing the function assigned to a Register key (for administrators)	7-12

8 Viewing Active Job and Job Logs

	Displaying the Job List screen.....	8-3
	Viewing the active job.....	8-3
	Viewing job logs.....	8-4

9 Login Screen

	Logging in to this machine.....	9-3
	Performing user authentication (MFP authentication).....	9-3
	Performing user authentication (external server authentication).....	9-5
	Performing account track.....	9-7

10 Specifications

10.1	Checking the specifications of this machine	10-3
10.2	Checking the specifications of optional devices	10-5
	Paper Feed Unit PF-P11.....	10-5
	Paper Feed Unit PF-P12.....	10-5
	Fax Kit FK-512.....	10-6
	Finisher FS-P02.....	10-6
	Authentication Unit AU-201.....	10-7
10.3	Standard operating life of consumables and periodic replacement parts	10-8



11 Trademarks and copyrights

Trademark acknowledgements.....	11-3
OpenSSL Statement	11-3
OpenSLP License	11-5
Bonjour.....	11-5
NetSNMP License.....	11-7
Kerberos.....	11-9
WPA Supplicant	11-12
Copyright	11-12
Note	11-12
SOFTWARE LICENSE AGREEMENT	11-13
Our Concern for Environmental Protection.....	11-14

12 Index



Introduction

1 Introduction

1.1 Welcome

Thank you for purchasing this machine.

To obtain maximum performance from this product and to learn how to use it effectively, please read this User's Guide as necessary.

1.2 User's Guides

Booklet manuals

Manual title	Overview
[Safety Information Guide]	This guide describes notes and precautions that should be followed to use this machine. Please be sure to read this manual before using this machine.

User's guides included in User's Guide CD/DVD-ROM

Manual title	Overview
[Quick Guide]	This guide describes how to perform basic operations of this machine and configure initial settings.
[User's Guide Introduction]	This guide contains information that is useful to know before beginning to operate this machine, such as the name of each part and how to turn the power on and off, use the Control Panel , and load an original or paper.
[User's Guide Print]	This guide describes how to install the printer driver as well as basic usage and applications.
[User's Guide Copy]	This guide describes various methods to make copies.
[User's Guide Scan]	This guide describes scan transmission operations and necessary preparations. You can scan a paper document, convert it to digital data, and send the result to the computer or server.
[User's Guide Fax]	This guide describes fax operations and necessary preparations.
[User's Guide Network Fax]	This guide describes fax (Internet fax) operations using the network and necessary preparations.
[User's Guide PC-FAX]	This guide describes PC- Fax operations and necessary preparations. You can send the original data created on the computer by fax directly without printing it out to paper.
[User's Guide Advanced Functions]	This guide describes how to install optional license kits and functions that can be used by installing the license kits.
[User's Guide Maintenance/Troubleshooting]	This guide describes how to replace consumables, clean this machine, and perform troubleshooting.
[User's Guide Description of Utility Keys]	This guide describes Utility settings such as [User Settings] and [Administrator Settings] for this machine.
[User's Guide Applied Functions]	This guide describes the special usages of this machine such as how to use Web Connection , manually install the printer driver, configure print settings using Linux, and use the authentication unit.

1.3 Notations and symbols used in this manual

Procedural instruction

- ✓ This check mark symbol shows a precondition of a procedure.
- 1 This format number "1" represents the first step.
- 2 This format number represents the order of consecutive steps.
 - This symbol indicates a supplementary explanation of a procedural instruction.

Symbols used in this manual

WARNING

- This symbol indicates that a failure to heed the instructions may lead to death or serious injury.

CAUTION

- This symbol indicates that a failure to heed the instructions may lead to mishandling that may cause injury or property damage.

NOTICE

This symbol indicates a risk that may result in damage to this machine or documents. Follow the instructions to avoid property damage.



Tips

This symbol indicates supplemental information of a topic as well as options required to use a function.



Reference

This symbol indicates reference functions related to a topic.



Related setting

This shows the settings related to a particular topic for any user.



Related setting (for the administrator)

This shows the settings related to a topic only for administrators.

Product and key names

Notations used in this manual	Description
[]	An item enclosed in brackets [] indicates a key name on the Touch Panel or computer screen, or the name of a user's guide.
Bold text	This presents a key name, part name, product name, or option name on the Control Panel .

Notations of application names

This manual describes application names as shown below.

Application name	Notations used in this manual
PageScope Direct Print	Direct Print
PageScope Web Connection	Web Connection
PageScope Data Administrator	Data Administrator
PageScope Net Care Device Manager	Net Care Device Manager

1.4 Safety information

This section contains detailed instructions on the operation and maintenance of this machine. To achieve optimum utility of this device, all operators should carefully read and follow the instructions in this manual.

Please read the following section before connecting the machine to the supply. It contains important information related to user safety and preventing equipment problems.

Please keep this manual in a handy place near the machine.



Make sure you observe all of the precautions appear in each section of this manual.

Reference







- Some parts of the contents of this section may not correspond with the purchased product.

Warning and precaution symbols

The following indicators are used on the warning labels or in the manuals to categorize the level of safety warnings.



 WARNING	Ignoring this warning could cause serious injury or even death.
 CAUTION	Ignoring this caution could cause injury or damage to property.

Meaning of symbols

-  A triangle indicates a danger against which you should take precaution.
-  This symbol warns against cause burns.
-  A diagonal line indicates a prohibited course of action.
-  This symbol warns against dismantling the device.
-  A solid circle indicates an imperative course of action.
-  This symbol indicates you must unplug the device.



Disassemble and modification

 WARNING

- Do not modify this product, as a fire, electrical shock, or breakdown could result. If the product employs a laser, the laser beam source could cause blindness. 
- Do not attempt to remove the covers and panels which have been fixed to the product. Some products have a high-voltage part or a laser beam source inside that could cause an electrical shock or blindness. 

 
Power cord

 WARNING

- Use only the power cord supplied in the package. If a power cord is not supplied, only use the power cord and plug that is specified in POWER CORD INSTRUCTION. Failure to use this cord could result in a fire or electrical shock. 
- Do not use the power cord other than being supplied in the package. If a power cord is not supplied, only use the power cord and plug that is specified in POWER CORD INSTRUCTION. Failure to use this cord could result in a fire or electrical shock. 




Power cord

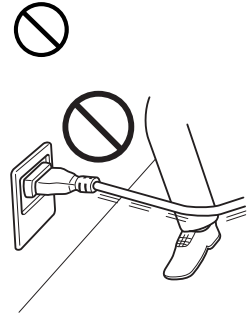- Do not scratch, abrade, place a heavy object on, heat, twist, bend, pull on, or damage the power cord. Use of a damaged power cord (exposed core wire, broken wire, etc.) could result in a fire or breakdown. Should any of these conditions be found, immediately turn OFF the power switch, unplug the power cord from the power outlet, and then call your authorized service representative.




Power source

 **WARNING**



- Do not use the power source voltage other than being specified on the machine. Failure to do that could result in a fire or electrical shock. 
- Do not use a multiple outlet adapter to connect any other appliances or machines. Use of a power outlet for more than the marked current value could result in a fire or electrical shock. 
- Do not use an extension cord in principle. Use of an extension cord could cause a fire or electrical shock. Contact your authorized service representative if an extension cord is required. 


 **CAUTION**




- The outlet must be near the equipment and easily accessible. Otherwise you can not pull out the power plug when an emergency occurs. 

Power plug

 **WARNING**


- Do not unplug and plug in the power cord with a wet hand, as an electrical shock could result. 
- Plug the power cord all the way into the power outlet. Failure to do this could result in a fire or electrical shock. 

 **CAUTION**

- Do not place any objects around the power plug, as the power plug may be difficult to pull out when an emergency occurs. 
- Do not tug the power cord when unplugging. Pulling on the power cord could damage the cord, resulting in a fire or electrical shock. 
- Remove the power plug from the outlet more than one time a year and clean the area between the plug terminals. Dust that accumulates between the plug terminals may cause a fire. 

Grounding

 **WARNING**

 
- Make sure to ground this product. (Connect the power cord to an electrical outlet that is equipped with a grounding terminal.) Failure to do so and an unlikely event of leakage could result in a fire or electrical shock. 

Installation


⚠ WARNING

- Do not place a flower vase or other container that contains water, or metal clips or other small metallic objects on this product. Spilled water or metallic objects dropped inside the product could result in a fire, electrical shock, or breakdown.

Should a piece of metal, water, or any other similar foreign matter get inside the product, immediately turn OFF the power switch, unplug the power cord from the power outlet, and then call your authorized service representative.

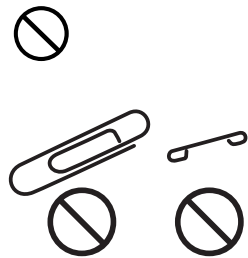

 - Do not use flammable sprays, liquids, or gases inside or near this machine. Do not clean the inside of this machine using a flammable gas duster. A fire or explosion could result.

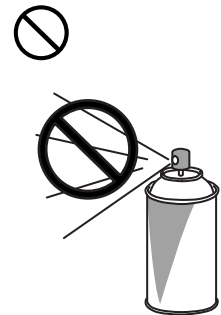

⚠ CAUTION

- After installing this product, mount it on a secure base. If the unit moves or falls, it may cause personal injury.



- Do not place the product in a dusty place, or a site exposed to soot or steam, near a kitchen table, bath, or a humidifier. A fire, electrical shock, or breakdown could result.



- Do not place this product on an unstable or tilted bench, or in a location subject to a lot of vibration and shock. It could drop or fall, causing personal injury or mechanical breakdown.



- Do not let any object plug the ventilation holes of this product. Heat could accumulate inside the product, resulting in a fire or malfunction.



Ventilation

⚠ CAUTION

- Using this product in a poorly ventilated room for a long time or producing a large volume of copies or prints may cause the odor of exhaust air from the machine. Ventilate the room well.



Actions in response to troubles


⚠ WARNING

- Do not keep using this product, if this product becomes inordinately hot or emits smoke, or unusual odor or noise. Immediately turn OFF the power switch, unplug the power cord from the power outlet, and then call your authorized service representative. If you keep on using it as is, a fire or electrical shock could result.



- Do not keep using this product, if this product has been dropped or its cover damaged. Immediately turn OFF the power switch, unplug the power cord from the power outlet, and then call your authorized service representative. If you keep on using it as is, a fire or electrical shock could result.




Actions in response to troubles CAUTION


- The inside of this product has areas subject to high temperature, which may cause burns. When checking the inside of the unit for malfunctions such as a paper mis-feed, do not touch the locations (around the fusing unit, etc.) which are indicated by a "Caution HOT" caution label.

**Consumables** WARNING

- Do not throw the toner cartridge or toner into an open flame. The hot toner may scatter and cause burns or other damage.

 CAUTION


- Do not leave toner-related parts (toner units, PC drum units, imaging units or developing units) within easy reach of children. Licking any of these parts or ingesting toner could damage your health.
- Do not store toner-related parts (toner units, PC drum units, imaging units or developing units) near devices susceptible to magnetism, such as precision equipment and data storage devices, otherwise they may malfunction. They could cause these products to malfunction.
- Do not force open the toner-related parts (toner units, PC drum units, imaging units or developing units). If toner tumbles from the toner bottle, take utmost care to avoid inhaling it or even getting skin contact.
- If toner lands on your skin or clothing, wash thoroughly with soap and water.
- If you inhale toner, move to a place with fresh air and gargle with a lot of water repeatedly. Should you get symptoms such as coughing, seek medical advice.
- If you get toner into your eyes, immediately rinse them with running water for over 15 minutes. Seek medical advice if irritation persists.
- If you swallow toner, rinse out your mouth and drink a few glasses of water. Seek medical advice if necessary.

**When moving the machine** CAUTION

- Whenever moving this product, be sure to disconnect the power cord and other cables. Failure to do this could damage the cord or cable, resulting in a fire, electrical shock, or breakdown.
- When moving this product, always hold it at the locations specified in the User's Guide or other documents. If the unit is moved while held at locations other than those specified, it may fall, causing severe personal injury.

**When using the machine** WARNING


- If you use an implantable medical equipment (cardiac pacemaker, etc.), do not bring the IC card reader close from the implant within 12 cm at all times. The radio waves may affect implantable medical equipment (cardiac pacemaker, etc.) operations.

 CAUTION

- When using the machine, do not look at the light of the lamp for a prolonged time. Eyestrain could result.



Papers


 CAUTION

- Do not use stapled paper, conductive paper (such as silver paper or carbon paper) or treated heat-sensitive/inkjet paper, otherwise a fire may result.



When the Fax is not installed:

Before successive holidays

 CAUTION

- Unplug the product when you will not use the product for long periods of time.



1.5 Legal Restrictions on Copying

Certain types of documents must never be copied with the purpose or intent to pass copies of such documents off as the originals.

The following is not a complete list, but is meant to be used as a guide to responsible copying.

Financial Instruments

- Personal checks
- Traveler's checks
- Money orders
- Certificates of deposit
- Bonds or other certificates of indebtedness
- Stock certificates

Legal Documents

- Food stamps
- Postage stamps (canceled or uncanceled)
- Checks or drafts drawn by government agencies
- Internal revenue stamps (canceled or uncanceled)
- Passports
- Immigration papers
- Motor vehicle licenses and titles
- House and property titles and deeds

General

- Identification cards, badges, or insignias
- Copyrighted works without permission of the copyright owner

In addition, it is prohibited under any circumstances to copy domestic or foreign currencies, or works of art without permission of the copyright owner.

When in doubt about the nature of a document, consult with legal counsel.

NOTICE

This machine provides the forgery prevention function in order to prevent financial instruments from being copied illegally.

We appreciate your understanding that printed images may infrequently have some noise or image data may not be stored under certain circumstances due to this forgery prevention function.

以上内容仅为本文档的试下载部分，为可阅读页数的一半内容。如要下载或阅读全文，请访问：<https://d.book118.com/665030243021011041>